



RUBICLEAN SAV

Non-aqueous solution used to clean watch movements, in after-sale service, in automatic systems.

COMPATIBILITY:

- All metals
- All electroplating and PVD coating

INGREDIENTS:

- Homogeneous mixture of solvents


PHYSICAL AND CHEMICAL DATA:

- pH concentrated: NA
- Density: 0.790 g/ml
- Flash point: 66°C
- Surface tension: 24.3 mN/m

INSTRUCTIONS FOR USE:

- Concentration : 100%
- Temperature: room (68°F)
- Time: 3 to 6 minutes by ultrasonics

PROCESS EXAMPLE:

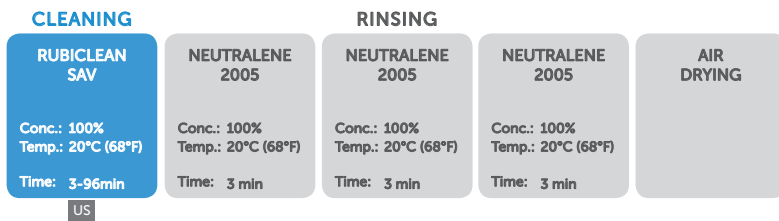

US

BENEFITS:

- Perfect for the cleaning of watch movements in after-sale service
- Non-flammable
- Perfectly removes oils
- Very high de-greasing power
- Gives brightness, clears and deoxidise metals, especially copper alloys
- Does not attack shellacs on the anchors

07/05/19

STORAGE CONDITIONS:

- Keep the recipient hermetically sealed between 5°C and 40°C (41°F and 104°F) in a dry place.
- Always keep in packaging made from the same material as the original packaging.



If you have any questions, please contact our Application Centre on: +41 22 365 46 66

