



LG 3

Liquid product for rinsing and drying watch movements in after-sales service systems or in ultrasonic processes.

COMPATIBILITY:

- All metals

INGREDIENTS:

- Solvents


PHYSICAL AND CHEMICAL DATA:

- pH concentrated: 7.0
- Density: 0.807
- Flash point: 34°C
- Surface tension: 27.3 mN/m

INSTRUCTIONS FOR USE:

- Concentration: 100%
- Temperature: 20°C (68°F)
- Time: 2 to 10 minutes

PROCESS EXAMPLE:

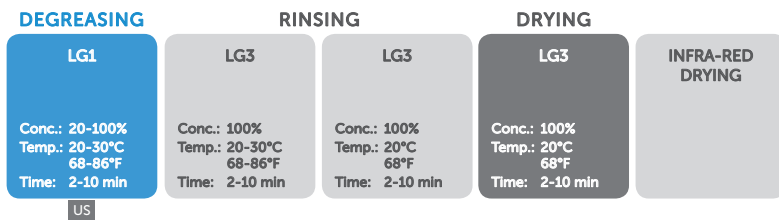

US

BENEFITS:

- Watch movements can be easily rinsed and dried
- Does not oxidise metals, either aluminium
- Spot-free drying

18/08/20

STORAGE CONDITIONS:

- Keep the recipient hermetically sealed between 5°C and 40°C (41°F and 104°F) in a dry place.
- Always keep in packaging made from the same material as the original packaging.



If you have any questions, please contact our Application Centre on: +41 22 365 46 66

